Baumann™ 24000CVF Carbon and 24000SVF Stainless Steel Flanged Control Valves

Contents

Introduction	•
Scope of Manual	•
Scope of Manual	-
Educational Services	-
Maintenance	•
Installation	•
Air Piping	
Disassembly	
Lapping the Metal Seat	1
Replacing Packing	
Actuator and Valve Body Reassembly	
Parts Ordering	
Dimensions and Weights	8
3	

Figure 1. Baumann Control Valve with FIELDVUE™ **Digital Valve Controller**



DVC6200

DVC2000

Introduction

The Baumann 24000CVF and 24000SVF line of pneumatic control valves (figure 1) may be used for the control of pressure, temperature, level, and flow. These valves are available with CL150 or 300 and EN PN10-40 flanged end connections.

The high performance 24000CVF and SVF designs feature low deadband and hysteresis, high flow capacity, superb control characteristics, tight shutoff, and advanced packing systems to meet demanding service conditions. The rugged, compact and light weight control valves are ideal for use in tight piping systems where space is a premium.

Scope of Manual

This instruction manual includes installation, maintenance, and parts information for the Baumann 24000CVF carbon steel and SVF stainless flanged control valves.

Do not install, operate, or maintain Baumann 24000CVF or 24000SVF control valves without being fully trained and qualified in valve, actuator, and accessory installation, operation, and maintenance. To avoid personal injury or property damage, it is important to carefully read, understand, and follow all the contents of this manual, including all safety cautions and warnings. If you have any questions about these instructions, contact your Emerson Process Management sales office before proceeding.





A WARNING

Always wear protective gloves, clothing and eyewear when performing any installation operations to avoid personal injury.

Personal injury or property damage caused by sudden release of pressure or bursting of pressure retaining parts may result if service conditions exceed those for which the product was intended. To avoid injury or damage, provide a relief valve for over pressure protection as required by government or accepted industry codes and good engineering practices.

Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

If installing into an existing application, also refer to the WARNING at the beginning of the Maintenance section in this instruction manual.

CAUTION

This valve is intended for a specific range of pressures, temperatures and other application specifications. Applying different pressures and temperatures to the valve could result in parts damage, malfunction of the control valve or loss of control of the process. Do not expose this product to service conditions or variables other than those for which the product was intended. If you are not sure what these conditions are you should contact your Emerson Process Management sales office for more complete specifications. Provide the product serial numbers (shown on the nameplate) and all other pertinent information.

A WARNING

If you move or work on an actuator installed on a valve with loading pressure applied, keep your hands and tools away from the stem travel path to avoid personal injury. Be especially careful when removing the stem connector to release all loading on the actuator stem whether it be from air pressure on the diaphragm or compression in the actuator springs.

Likewise take similar care when adjusting or removing any optional travel stop. Refer to the relevant actuator Maintenance Instructions.

If hoisting the valve, take care to prevent people from being injured in case the hoist or rigging slips. Be sure to use adequate sized hoists and chains or slings to handle the valve.

A WARNING

Personal injury could result from packing leakage. Valve packing is tightened before shipment; however, the packing might require some readjustment to meet specific service conditions.

Educational Services

For information on available courses for Baumann 24000CVF/SVF valves, as well as a variety of other products, contact:

Emerson Process Management Educational Services - Registration

Phone: 1-641-754-3771 or 1-800-338-8158

E-mail: education@emerson.com

http://www.emersonprocess.com/education

Maintenance

A WARNING

Avoid personal injury and property damage from sudden release of process pressure or bursting of parts. Before performing any maintenance operations:

- Do not remove the actuator from the valve while the valve is still pressurized.
- Always wear protective gloves, clothing, and eyewear when performing any maintenance operations.
- Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the valve.
- Use bypass valves or completely shut off the process to isolate the valve from process pressure. Relieve process pressure on both sides of the valve. Drain the process media from both sides of the valve.
- Depending on the actuator construction, it will be necessary to manage the pneumatic actuator spring
 pre-compression. It is essential to refer to the relevant actuator instructions in this manual to perform safe removal of
 the actuator from the valve.
- Use lock-out procedures to be sure the above measures stay in effect while you work on the equipment.
- The valve packing box may contain process fluids that are pressurized, even when the valve has been removed from the pipeline. Process fluids may spray out under pressure when removing the packing hardware or packing rings, or when loosening the packing box pipe plug.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

Note

Whenever a gasket seal is disturbed by removing or shifting gasketed parts, install a new gasket during reassembly. This provides a good gasket seal because the used gasket may not seal properly.

Installation

- 1. Before installing the valve in the pipeline, thoroughly clean the line of all dirt, welding chips, scale, oil or grease, and other foreign material.
- 2. Install the valve so the controlled fluid will flow through the valve body in the direction indicated by the arrow cast on the valve body.
- 3. A three-valve bypass must be used to permit removal of the control valve from the line without shutting down the system.
- 4. In case of a heat-insulated installation, insulate the valve body only, not the bonnet.

A WARNING

To avoid personal injury or property damage, do not attempt to do any work on a valve while the system is in operation. The valve must be isolated 100% from the active system and the isolated line voided of pressure and/or hazardous fluids.

Air Piping

1. For an air-to-extend actuator (air-to-close action), connect the actuating air pressure line to the 1/4 NPT opening in the upper diaphragm case. For an air-to-retract actuator (air-to-open action) connect the actuating air pressure line to the 1/4 NPT in the lower diaphragm case.

2. Use 6.4 mm (1/4 inch) O.D. tubing or equivalent for all air lines. If air line exceeds 8 m (25 ft) in length, 9.5 mm (3/8 inch) tubing is preferred. Air lines must not leak. Air pressure not to exceed 2.5 barg (35 psig).

Disassembly

A WARNING

If there is evidence of process fluid under pressure leaking from the joint, retighten the valve body/joint nuts. Return to the Warning at the beginning of the Maintenance section to ensure proper steps have been taken to isolate the valve and relieve process pressure.

CAUTION

- When assembling or disassembling the valve, do not turn the valve stem while the plug is touching the valve seat. This will damage the valve's seating surfaces.
- When adjusting the valve stem, do not grip the stem directly with pliers or a wrench. This will damage the surface of the stem, and cause damage to the packing in the valve. Instead, counter-tighten the two locknuts (key 27) on the stem (key 5). This will allow you to turn the stem by turning the locknuts (key 27) with a wrench.
- When placing the valve in a vise, do not clamp the rounded sides of the valve. This will distort the shape of the casting, and will ruin the valve. Caution must be taken not to damage the serrated flange faces.
- Mount the valve in a vise by clamping one flange below the serrated surface. Caution must be taken not to damage the serrated flange faces.

Actuator Removal

Access to the internal components of the valve body can be accomplished with the actuator removed. For actuator maintenance see the following instruction manual (<u>Baumann Actuator Instructions</u>, <u>D103352X012</u>).

Air-to-Close Actuators

- 1. Disconnect the air supply to the actuator and remove the air tubing.
- 2. Loosen the drive nut (key 9) and then remove the plug and stem (keys 4 and 5) assembly by holding the actuator stem still while unthreading the plug and stem assembly clockwise.
- 3. Remove the stem locknuts (key 27), travel indicator (key 58), and yoke drive nut (key 9).
- 4. Remove the actuator from the valve.

Air-to-Open Actuators

- 1. Using flexible tubing, apply sufficient air pressure to the actuator to lift the plug off the seat.
- 2. Loosen the drive nut (key 9) and then remove the plug and stem (keys 4 and 5) assembly by holding the actuator stem still while unthreading the plug and stem assembly clockwise.
- 3. Remove the stem locknuts (key 27), travel indicator (key 58), and yoke drive nut (key 9).
- 4. Remove the actuator from the valve.
- 5. Disconnect the air supply to the actuator and remove the air tubing.

Valve Body Disassembly

1. After removing the actuator, remove the hex nuts (key 12), lift bonnet (key 8), and plug and stem (keys 4 and 5) from the valve body (key 1). A new valve body gasket (key 49) should be installed each time the valve is disassembled.

2. Loosen the packing spring load by removing the packing follower (key 10).

Remove the plug and stem assembly by pulling it out through the bottom of the bonnet (key 8) while rotating the stem (key 5). This will help prevent damage to the packing components.

Note

Handle the parts carefully to avoid damaging the seating and guiding surfaces. Wipe the parts with a clean soft cloth and examine for signs of wear or damage.

- 3. To remove the seat ring (key 2), fabricate a special wrench to engage the lugs on the ring. Clean the seat ring thoroughly and examine for signs of wear or damage.
- 4. Low Flow Trims:
 - a. For Baumann 151 trim (figure 4) unscrew the seat subassembly (key 51) from the seat ring (key 2) with a 5/8 inch socket wrench. When reassembling, hand tighten the subassembly (key 51) and then rotate 1/8 of a turn with the 5/8 inch socket to lock in place.

Note

If changing to Baumann 151 trim, for correct flow characteristics, be sure the valve is reversed in the pipeline so that flow direction is flow down.

- b. For Baumann 177 trim (figure 5) unscrew the retainer nut (key 24) using a 3/4 inch socket wrench. Remove the gland (key 23) and insert (key 25). Replace the insert (key 25), making sure that the tapered portion faces up. If replacement of the housing (key 26) is required, use a 5/8 inch socket wrench.
- 5. NOLEEK Bellows Trim: Refer to figure 6 and table 7. Hold the bellows bonnet and push down on the stem to expose the plug retaining pin (key 21). Using a small punch, tap pin (key 21) out. To replace the new plug retaining pin (key 21), be sure the plug and stem are aligned to expose the hole (figure 6). With a needle nose pliers, slide the pin (key 21) into the hole.

A WARNING

Be sure the plug retaining pin (key 21) is flush inside the hole and not exposed on either side of the plug or damage could happen to the bonnet interior.

Lapping the Valve Seat

If valve seat leakage becomes excessive, it may be necessary to lap the valve seat.

Lapping is the process of mating the valve plug to the seat ring, with an abrasive to produce a close fit. When valve seat leakage becomes excessive, lapping becomes necessary. The plug and seat ring seating surfaces should be free of large scratches or dents and the contact surface of the seats should be as narrow as possible.

1. Disassemble the valve body and remove the plug and stem assembly (keys 4 and 5) as directed in the previous Valve Body Disassembly section in this instruction manual.

2. Use a good quality lapping compound with a mixture that contains 280 to 600 grit. Apply at several spots around the plug seating surface. Replace the plug and stem carefully in the bonnet.

- 3. Install the bonnet (key 8) into the valve body, without gasket and hand tighten. The bonnet will serve as a guide during the lapping operation.
- 4. Lap the valve by applying a slight pressure on the stem and rotate the stem in short oscillating strokes approximately 8 to 10 times or until you see an even and complete lap line. The plug should be intermittently lifted and turned 90 degrees while lapping to keep the plug and seat ring concentric.
- 5. Clean the valve seat and plug (key 4) thoroughly when lapping is complete, removing all traces of lapping compound.
- 6. Reinsert the plug and stem assembly through the bottom of the bonnet (key 8) by slowly rotating through the packing. Be careful not to damage the packing rings.

Replacing Packing

Refer to figure 2 and the standard and optional packing constructions (figure 7) to determine the packing that has been preinstalled in your valve.

- 1. Disassemble the valve as directed earlier. Remove the locknuts (key 27) and travel indicator (key 58), and turn the plug stem (key 5) out through the packing box. Remove the packing follower (key 10). Push out the old packing (key 14) by working from the underside of the bonnet (key 8).
- 2. Standard Spring Loaded PTFE V-Ring Packing (figures 2 and 7): Carefully insert each piece in exact order shown in figure 7. Turn the packing follower (key 10) until it shoulders on the bonnet (key 8). This will compress the packing spring (key 6) to enable constant stem sealing throughout packing life.
- 3. Molded Graphite Ribbon Packing (figure 7): Carefully insert each piece in exact order shown in figure 7. Hand tighten the packing follower (key 10). Use a wrench to increase tightness by turning the follower an additional 60 degrees.
- 4. ENVIRO-SEAL™ Packing (figure 7): Carefully insert each piece in exact order as shown in figure 7. Tighten the packing follower (key 10) until the Belleville springs are compressed. This will be signaled by a significant increase in resistance. Back off the follower 1/8 to 1/4 turn. A gap of approximately 1.5 mm (1/16 inch) between the packing follower and the bonnet will ensure the packing is seated properly.
- 5. For the optional NOLEEK bellows bonnet (not available with Baumann 24000CVF carbon steel valves):

NOLEEK bellows seal packing (figure 6, table 7): Insert each piece in the exact order shown in the illustration. Hand tighten the packing follower (key 10).

Actuator and Valve Body Reassembly

- 1. Insert a new valve body gasket (key 49) and install the bonnet assembly (key 8). For NPS 1/2 to 1 valves, tighten the nuts (key 12) to torque of 9.5-17.6 N•m (7-13 lbf•ft); NPS 1-1/2 to 2 valves, tighten nuts (key 12) to torque of 21.7-42.0 N•m (16-31 lbf•ft).
- 2. Place the actuator yoke over the stem (key 5). While tilting the actuator back, drop the yoke drive nut (key 9) over the stem (key 5). Run the locknuts (key 27), and the travel indicator (key 58), down as far as possible and counter tighten the locknuts (key 27) to lock.

See the following instruction manual (<u>Baumann Pneumatic Actuators</u>, <u>D103352X012</u>) for reassembly and bench range adjustment.

CAUTION

When assembling or disassembling the valve, do not turn the valve stem while the plug is in contact with the valve seat. This can damage the seating surface very quickly.

A WARNING

To avoid personal injury or equipment damage due to possible sudden shifting or falling of the valve assembly, do not lift the valve assembly by the handwheel.

Parts Ordering

When corresponding with your Emerson Process Management sales office about this equipment, always mention the valve serial number. When ordering replacement parts, also specify the key number, part name, and desired material using the following parts tables.

A WARNING

Use only genuine Fisher® replacement parts. Components that are not supplied by Emerson Process Management should not, under any circumstances, be used in any Fisher valve, because they may void your warranty, might adversely affect the performance of the valve, and could cause personal injury and property damage.

Figure 2. Baumann 24000CVF Valve Body Assembly with Standard PTFE Spring-Loaded Packing

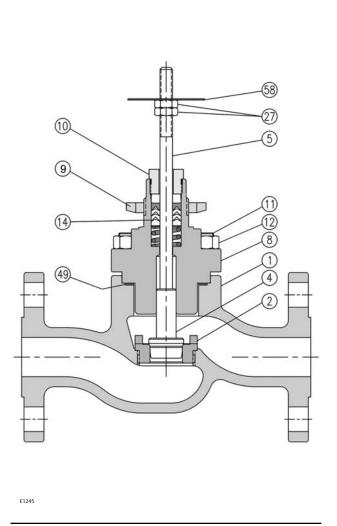


Figure 3. Baumann 24000SVF Valve Body Assembly with Standard PTFE Spring-Loaded Packing

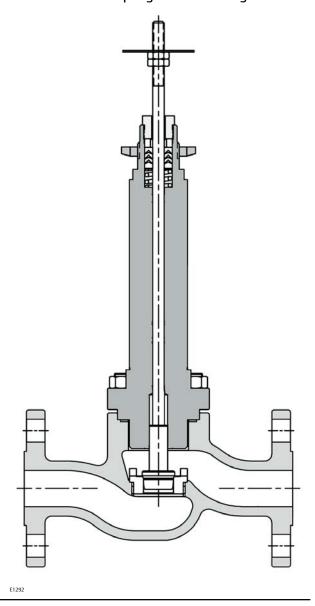


Table 1. Baumann 24000CVF/SVF Common Parts

L/FV/					VALVE SIZE		
KEY NO.	QTY	DESCRIPTION	DN15 (NPS 1/2)	DN20 (NPS 3/4)	DN25 (NPS 1)	DN40 (NPS1-1/2)	DN50 (NPS 2)
		Valve Body, Carbon Steel, CL150	24000-165	24000-265	24000-365	24000-565	24000-665
	-	Valve Body, Carbon Steel, CL300	24000-167	24000-267	24000-367	24000-567	24000-667
1		Valve Body, Carbon Steel, PN 10-40	24000-169	24000-269	24000-369	24000-569	24000-669
1		Valve Body, Stainless Steel, CL150	24000-115	24000-215	24000-315	24000-515	24000-615
	-	Valve Body, Stainless Steel, CL300	24000-117	24000-217	24000-317	24000-517	24000-617
		Valve Body, Stainless Steel, PN 10-40	24000-119	24000-219	24000-319	24000-519	24000-619
		Bonnet, Standard for Carbon Steel	2400	0-163	24000-363	24000-563	24000-663
	Bonnet, Standard for Stainless Steel		2400	0-123	24000-323	24000-523	24000-623
8	1	Bonnet, Single Ext ⁽²⁾	24000-123-1		24000-323-1	24000-523-1	24000-623-1
8		Bonnet, Double Ext ⁽²⁾	24000	-123-2	24000-323-2	24000-523-2	24000-623-2
		Bonnet, Triple Ext ⁽²⁾	24000	-123-3	24000-323-3	24000-523-3	24000-623-3
		Bonnet, NOLEEK Bellows ⁽²⁾	2400	0-130	24000-330	24000-530	24000-630
8a	1	Guide Bushing ⁽¹⁾		24000	0-124 (24000CVF)	ONLY)	
9	1	Drive Nut (Yoke)			011757-003-153		
10	1	Packing Follower			24490-1		
11	4	Stud		24000-127		2400	0-126
12	4	Nut		25705 25717-1			
14*	1	V-Ring Packing Set (standard)	24494T001 (See page 13 for additional packing options)				5)
27	2	Locknuts	971514-002-250				
49*	1	Valve Body Gasket	24000-133	24000-133	24000-333	24000-533	24000-633
58	1	Travel Indicator		1	24299	ı	
1. Guide	bushing is a	applicable to 24000CVF valve ONLY.	1				

*Recommended spare parts 9

Guide bushing is applicable to 24000CVF valve ONLY.
 Extension bonnets and NOLEEK bellows bonnets are not available with 24000CVF carbon steel valves.

The guidelines below apply to tables 2, 3, 4, and 6.

For Extension Bonnet Construction
Substitute -104 for -101 -105 for -102
Substitute -105 for -102
Substitute -108 for -102
Substitute -107 for -101 -108 for -102
Substitute -108 for -102
Substitute -107 for -101 -108 for -102
Substitute -111 for -102

Table 2. Plug and Seat Ring for NPS 1/2, 3/4, and 1 Valves

KEY	DESCRIPTION	PLUG TYPE	PLUG NO.	ORIFICE DIAMETER	C _v (2)		VALVE SIZE		
NO.	DESCRIPTION	PLUGITPE		mm (Inch)	C _V (-/	DN 15 (NPS 1/2)	DN 20 (NPS 3/4)	DN 25 (NPS 1)	
		Low Flow	Low Flow See tal				ble 4		
		LOWITOW	177			See table 5			
					0.02 ⁽¹⁾	GE4638		GE46385X092	
		Metal Seat, Micro	102	6.3 (0.25)	0.05 ⁽¹⁾		36X052	GE46386X092	
		Trim (Linear)	102		0.1 ⁽¹⁾		37X092	GE46387X052	
					0.2 ⁽¹⁾		38X012	GE46388X092	
					1.0	24893-1	101-577		
					1.1			24893-101-577	
				9.5 (0.375)	1.6		24796-101-577		
					2.7	24609-1	101-577		
					3.2			24609-101-577	
		PTFE Seat (Equal %)	577		3.9	24010-2-	-101-577		
					5			24010-2-101-577	
				20.6 (0.8125)	6.1	24010-101-577			
				, ,	9.5		24010-101-577		
					11			24010-101-577	
				26.9 (1.0625)	13			24011-101-577	
		Metal Seat (Equal %)	548 (S41600)	6.3 (0.25)	0.22 ⁽¹⁾	GE4639	93X092	GE46393X052	
					0.61 ⁽¹⁾	GE4639	94X092	GE46394X052	
					1.0 ⁽¹⁾	GE4639	92X092	GE46392X052	
	DI 0.51			9.5 (0.375) 20.6 (0.8125)	1.6	24634-6-	-101-548		
4*	Plug & Stem Assy				1.7			24634-6-101-548	
	Assy				2.9	24171-12	2-101-548		
					3.3			24171-12-101-548	
					3.9	24185-6-	-101-548		
					4.4			24185-6-101-548	
					6.1	24061-5-101-548			
					9.8		24061-5-101-548		
					11			24061-5-101-548	
				26.9 (1.0625)	15.5			24062-1-101-548	
					0.22(1)	GE4639	90X052	GE46390X092	
				6.3 (0.25)	0.61 ⁽¹⁾	GE4639	91X052	GE46391X092	
				, ,	1.0 ⁽¹⁾	GE4638	39X052	GE46389X092	
					1.6	24634-1	101-588		
				0.5 (0.375)	1.7			24634-101-588	
				9.5 (0.375)	2.9	24171-1	101-588		
		Metal Seat (Equal %)	588		3.3			24171-101-588	
					3.9	24185-1	101-588		
					4.4			24185-101-588	
				20.6 (0.8125)	6.1	24061-101-588			
				(3.2.1.2.7)	9.8		24061-101-588		
					11			24061-101-588	
			l	26.9 (1.0625)	15.5			24062-101-588	

-continued-

Table 2. Plug and Seat Ring for NPS 1/2, 3/4, and 1 Valves (continued)

KEY	DESCRIPTION	PLUG TYPE	PLUG NO.	ORIFICE DIAMETER	C _v (2)		VALVE SIZE	
NO.	DESCRIPTION	PLUG TYPE	PLUG NO.	mm (Inch)	C _V (2)	DN 15 (NPS 1/2)	DN 20 (NPS 3/4)	DN 25 (NPS 1)
					0.1		24660-101-677	
					0.2		24625-101-677	
				9.5 (0.375)	0.5		24617-101-677	
		PTFE Seat (Linear)	677	9.5 (0.575)	1.0		24631-101-677	
		FILL Seat (Linear)	077		2.8	24656-1	101-677	
					3.3			24656-101-677
				20.6 (0.8125)	3.4	24010-1-	-101-677	
				20.0 (0.8123)	5.1			24010-1-101-677
					0.5 ⁽¹⁾	GE4639	98X052	GE46398X092
				6.3 (0.25)	1.0 ⁽¹⁾	GE4639	97X052	
					1.4 ⁽¹⁾			GE46397X092
					1.6	24669-1-	101-648	
				0 E (0 37E)	1.7			24669-1-101-648
			6.40	9.5 (0.375)	2.9	24671-2-	101-648	
		Metal Seat (Linear)	648 (S41600)		3.3			24671-2-101-648
			(\$41600)	20.6 (0.8125)	3.7	24757-5-	101-648	
4*	Plug & Stem				4.6			24757-5-101-648
4	Assy				6.1	24717-3-101-648		
					9.8		24717-3-101-648	
					11			24717-3-101-648
				26.9 (1.0625)	13			24791-1-101-648
				6.3 (0.25)	0.5 ⁽¹⁾	GE4639	96X052	GE46396X092
					1.0 ⁽¹⁾	GE4639	95X062	
					1.4 ⁽¹⁾			GE46395X102
					1.6	24669-1	101-688	
					1.7			24669-101-688
				9.5 (0.375)	2.9	24671-1	101-688	
		Metal Seat (Linear)	688		3.3			24671-101-688
		, ,			3.7	24757-1	101-688	
					4.6			24757-101-688
				20.6 (0.8125)	6.1	24717-101-688		
				,	9.8		24717-101-688	
					11			24717-101-688
				26.9 (1.0625)	13			24791-101-688
		9.5 (0	.375) Orifice	Diameter, S31600		007635-	002-163	24000-342
				Diameter, S31600		007635-	005-163	24000-343
		26.9 (1	.0625) Orifice	Diameter, S31600				24000-344
2*	Seat Ring	,		Diameter, S41600		007635-	002-416	24000-342-1
		· ·		Diameter, S41600		007635-		24000-343-1
		,	,	Diameter, S41600				24000-344-1

2. K_v equals (0.86)*(C_v)

Table 3. Plug and Seat Ring for NPS 1-1/2 and 2 Valves

KEY			PLUG	ORIFICE DIAMETER	- (1)	VALVI	VALVE SIZE					
NO.	DESCRIPTION	PLUG TYPE	NO.	mm (Inch)	C _v (1)	DN 40 (NPS 1-1/2)	DN 50 (NPS 2)					
				31.8 (1.25)	26	24411-102-577						
					13	24884-1	02-577					
		DTEE C 1/E 10/		20.1 (1.50)	20	24774-1	02-577					
		PTFE Seat (Equal %)	577	38.1 (1.50)	33	24254-102-577						
					38		24254-102-577					
				50.8 (2.0)	33		24882-102-577					
				24.0 (4.25)	10	24421-2-102-548						
				31.8 (1.25)	27	24401-2-102-548						
					11	24635-2-	102-548					
			548		18		24710-2-102-548					
		Metal Seat (Equal %)	(S41600)	38.1 (1.50)	19	24710-2-102-548						
					31	24038-2-102-548						
					35		24038-2-102-548					
				50.8 (2.0)	55		24039-1-102-548					
					10	24421-102-588						
				31.8 (1.25)	27	24401-102-588						
					11	24635-1	02-588					
					18		24710-102-588					
		Metal Seat (Equal %)	588	38.1 (1.50)	19	24710-102-588						
				(31	24038-102-588						
					35		24038-102-588					
4*	Plug and Stem		-	50.8 (2.0)	55		24039-102-588					
	Assy			31.8 (1.25)	26	24436-102-677						
				3.10 (1.23)	14	24799-1						
		PTFE Seat (Linear)	677	38.1 (1.50)	23	24798-1						
		r II L Seat (Lillear)	· · · · z seae (z.i.ea.)	077	""] ,,,		37		24891-102-677		
				50.8 (2.0)	56		24070-102-677					
			-			11	24425-1-102-648					
					_				31.8 (1.25)	26	24424-1-102-648	
							12					
					22	24761-2-102-648 24899-2-102-648						
		Metal Seat (Linear)	648 (S41600)	38.1 (1.50)	31	24760-1-102-648						
			(341000)		35		24760-1-102-648					
					33		24887-1-102-648					
				50.8 (2.0)	55		24762-1-102-648					
					11	24425-102-688						
				31.8 (1.25)	26	24424-102-688						
					+		02.600					
					12	24761-1						
		Metal Seat (Linear)	688	38.1 (1.50)	22	24899-1 24760-102-688	ı					
					31							
			-		35		24760-102-688					
				50.8 (2.0)	33		24887-102-688					
		20.1/	1.35 :====1.0 :0	, ,	55	24000 542	24762-102-688					
		,		ice Diameter, S31600		24000-542	24000 642					
		·		ice Diameter, S31600		24000-541	24000-642					
2*	Seat Ring			ce Diameter, S31600			24000-641					
		·		ice Diameter, S41600		24000-542-1						
				ice Diameter, \$41600		24000-541-1	24000-642-1					
		50.8 mm ((2.0 inch) Orifi	ce Diameter, S41600			24000-641-1					
1. K _v eq	uals (0.86)*(C _v)											

12

Figure 4. Optional Baumann 151 Low Flow Trim Assembly

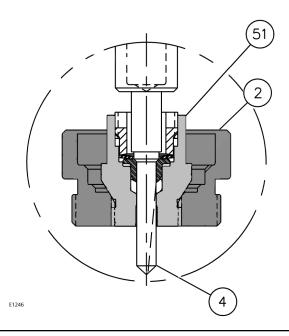


Table 4. Plug and Seat Ring for Baumann 151 Trim

	t 4.1 lug ullu .										
KEY	DESCRIPTION	PLUG TYPE	PLUG	ORIFICE	Cv	V		VALVE SIZE			
NO.	DESCRIPTION	PLOGITFE	SERIES	DIAMETER mm (Inch)	Cv	K _v -	DN 15 (NPS 1/2)	DN 20 (NPS 3/4)	DN 25 (NPS 1)		
2*			Seat Ring	g	24000)-135	24000-345				
51*		S	eat Sub-Asse	embly				24151-20			
					0.00013	0.0001		24151-2-101-151			
					0.00025	0.0002		24151-3-101-151			
					0.0005	0.0004		24151-4-101-151			
		Modified Equal % Low		3.96 (0.156)		0.001	0.0009		24151-5-101-151		
							0.0017		24151-6-101-151		
	DI O.C.				0.004	0.003		24151-7-101-151			
4*	Plug & Stem Assy				0.008	0.007		24151-8-101-151			
	7133y	Flow			0.015	0.013		24151-9-101-151			
					0.03	0.026		24151-10-101-151			
							0.06	0.052		24151-11-101-151	
					0.1	0.86		24151-12-101-151			
					0.2	0.17		24151-24-101-151			
					0.45	0.39		24151-25-101-151			

*Recommended spare parts 13

Figure 5. Optional Baumann 177 Low Flow Trim Assembly

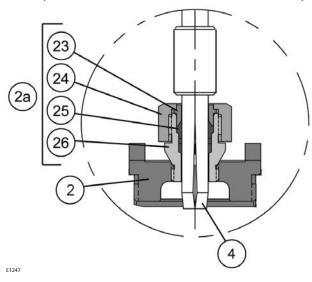


Table 5. Baumann 177 Low Flow Trim

Key N	lo.	Description			
4*		Plug (see table 6)			
	23	Gland			
2a*	24	Retainer Nut	Seat Ring Subassembly,		
Za	25	Insert	P/N 24241		
	26 Housing				

Table 6. Plug and Seat Ring for Baumann 177 Trim

KEY	DESCRIPTION	PLUG TYPE	PLUG	ORIFICE	-	И.		VALVE SIZE						
NO.	DESCRIPTION	PLUG I TPE	SERIES	DIAMETER mm (Inch)	Cv	C _v K _v	DN 15 (NPS 1/2)	DN 20 (NPS 3/4)	DN 25 (NPS 1)					
2*	Seat Ring						24000)-135	24000-345					
2a*	Seat Sub-Assembly (See table 5)							24241						
										0.0005	0.0004		24598-101-177	
				1			0.001	0.0009		24597-101-177				
	DI O.C.				0.002	0.0017		24594-101-177						
4*	Plug & Stem Assy		177	7.9 (0.3125)	0.005	0.004		24595-101-177						
	7133y				0.01 0.009	9 24596-101-177								
					0.02	0.017		24621-10-101-177						
					0.05	0.04		24658-10-101-177						

A WARNING

The Baumann NOLEEK valve bonnet assembly is not intended for use in lethal service applications.

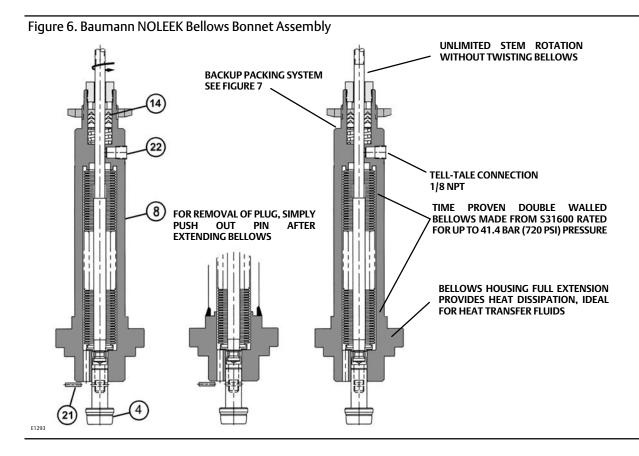


Table 7. NOLEEK Bellows Bonnet Assembly with Standard Packing Kit⁽¹⁾

Key No.	Qty	Description Part Number					
4*	1	Plug Contact Factory					
		Complete Bellows/ Bonnet Sub-Assembly, DN15 & 20 (NPS 1/2 & 3/4)	24000-130				
8*	1	Complete Bellows/ Bonnet Sub-Assembly, DN25 (NPS 1)	24000-330				
8	'	Complete Bellows/ Bonnet Sub-Assembly, DN40 (NPS 1-1/2)	24000-530				
		Complete Bellows/ Bonnet Sub-Assembly, DN50 (NPS 2)	24000-630				
14*	1	V-Ring Packing Kit (standard)	24494T001				
14	ı	ENVIRO-SEAL Packing Kit (optional)	24490T001				
21*	1	Plug Retaining Pin 971342-005-163					
22*	1	1 Hex Socket Pipe Plug, 1/8 NPT, Stainless Steel Included with Key 8					

*Recommended spare parts 15

Figure 7. Packing Kits

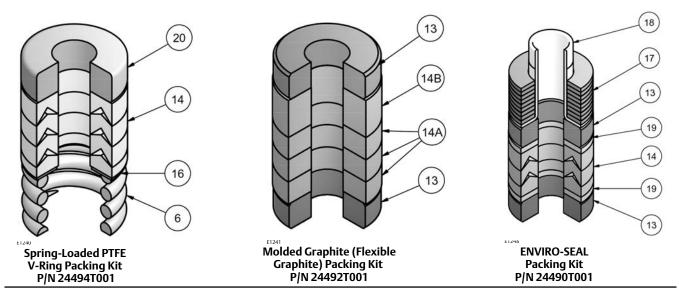


Table 8. Spring-Loaded PTFE V-Ring Packing Kit P/N 24494T001

Key No.	Description	Material
6	Spring	ASTM A313 S30200
14	Packing Set	PTFE / carbon-filled PTFE
16	Washer	ASTM A240 S31600
20	Spacer	J-2000 (filled PTFE)

Table 9. Molded Graphite (Flexible Graphite) Packing Kit P/N 24492T001

Key No.	Description	Material
13	Bushing, qty 2	Carbon - Graphite
14A	Packing Ring, qty 2	Graphite
14B	Packing Ring	Graphite

Table 10. ENVIRO-SEAL Packing Kit P/N 24490T001

Key No.	Description	Material
13	Bushing, qty 2	Carbon Graphite
14	Packing Set	PTFE / carbon-filled PTFE
17	Belleville Spring	ASTM B637 N07718
18	Bushing	PEEK
19	Washer, qty 2	Modified PTFE

24000CVF/SVF Valves

April 2015

Special ENVIRO-SEAL Packing Note


The ENVIRO-SEAL PTFE packing system is suitable for 100 ppm environmental applications on services up to 51.7 barg (750 psig) and process temperatures ranging from -46 to 232° C (-50 to 450° F).

For non-environmental applications, this packing system offers excellent performance at the same temperature range up to the maximum valve working pressure.

Temperature limits apply to packing arrangements only. Complete valve assembly temperature limits may differ. Refer to appropriate pressure/ temperature ratings.

Reference Packing Selection Guidelines for Fisher Sliding-Stem Valves, bulletin 59.1:062, D101986X012.



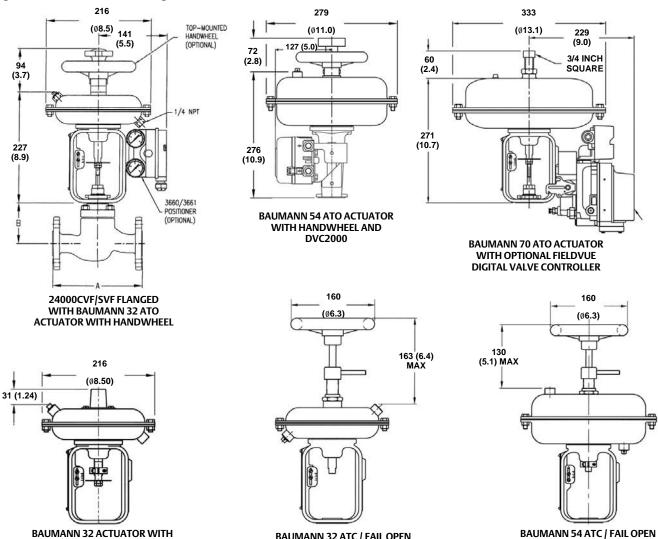

BAUMANN 32 ATC / FAIL OPEN ACTUATOR WITH HANDWHEEL

NOTE: ACTUATOR REMOVAL REQUIRES 115 mm (4.5 INCHES) VERTICAL CLEARANCE.

BAUMANN 32 ACTUATOR WITH

ADJUSTABLE OPEN / CLOSE DUAL TRAVEL STOPS

> mm (inch)

ACTUATOR WITH HANDWHEEL

Table 11. Baumann Valve Dimensions

VALVE SIZE		A FACE-to-FACE					B BONNET						
		CL150		CL300		PN 10-40		Standard		Single Extension		Bellows	
DN	NPS	mm	Inch	mm	Inch	mm	Inch	mm	Inch	mm	Inch	mm	Inch
15	1/2	184	7.25	190	7.50	130	5.11	79	3.1	216	8.5	226	8.9
20	3/4	184	7.25	194	7.62	150	5.90	79	3.1	216	8.5	226	8.9
25	1	184	7.25	197	7.75	160	6.30	84	3.3	221	8.7	229	9.0
40	1-1/2	222	8.75	235	9.25	200	7.87	96	3.8	234	9.2	229	9.0
50	2	254	10.0	267	10.5	230	9.06	107	4.2	244	9.6	234	9.2

Table 12. Baumann Valve Assembly Weights

VAL	/E SIZE	WEIGHTS							
VAL	/E SIZE	CL1	150	CL3	300	PN 10-40			
DN	NPS	kg	lb	kg	lb	kg	lb		
15	1/2	3.0	6.6	3.5	7.7	3.3	7.3		
20	3/4	3.1	6.9	4.2	9.3	3.4	7.6		
25	1	5.1	11.3	5.9	13.1	5.7	12.6		
40	1-1/2	7.9	17.5	10.7	23.5	8.8	19.5		
50	2	13.4	29.5	15.0	33.1	14.4	31.9		

Table 13. Baumann Actuator Weights

ACTUATOR	WEIGHTS					
ACTUATOR	kg	lbs				
32	4.5	10				
54	11.3	25				
70	15.4	34				
MV1020 ⁽¹⁾	10	22				
VA1020 ⁽¹⁾	14	30				
NV24-MFT (non spring return) ⁽¹⁾	1.5	3.3				
NVF24-MFT or NVF24-MFT-E (spring return) ⁽¹⁾	1.8	4				

Neither Emerson, Emerson Process Management, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

Baumann, Fisher, FIELDVUE, and ENVIRO-SEAL are marks owned by one of the companies in the Emerson Process Management business unit of Emerson Electric Co. Emerson Process Management, Emerson, and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Process Management Marshalltown, Iowa 50158 USA Sorocaba, 18087 Brazil Chatham, Kent ME4 4QZ UK Dubai, United Arab Emirates Singapore 128461 Singapore

www.Fisher.com

